

 
STRONG ACIDIC WATER

Lower than pH2.7
Not Suitable as drinking water


Operating Panel and Settings

Various ways for using Strong Acidic Water

LEVELUK DX II

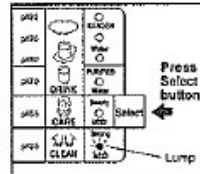

LEVELUK SUPER501

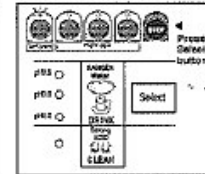

When preparing the water, use refined salt which is greater than 99% pure.

THE MERITS OF STRONG ACIDIC WATER

- **Cleaning and disinfecting:** Strong acidic water was approved for disinfecting food products in June 2002, in accordance with Food Hygiene Law, under the name hypochlorous acid water. It is now used for a wide range of applications, including the cleaning and disinfecting of foods and cooking facilities.

1. For cleaning foods

When cleaning with strong acidic electrolyzed water, it is important to keep the water running, as the available chlorine will lose effect quite quickly. When disinfecting in a basin, allowing the water to overflow will ensure continuous disinfection. Limit use of strong Kangen electrolytic water to a short time.

2. To disinfect utensils, dish clothes, towels and containers

Use a separate utensil when washing, depending on the particular use or the type of dishes or tableware being cleaned. Rinse and allow to dry thoroughly.

3. Washing your hands before cooking is an important aspect of food sanitation

Wash your hands carefully, then rinse with running strong acidic electrolyzed water to disinfect.

4. Washing metal objects

Metal utensils such as knives which are prone to rust may corrode when washed with strong acidic water. Rinse with tap water or wipe with a cloth to prolong the life of your metal utensils. For long-term use, protect your sink and drainpipes from corrosion by running tap water at the same time.

5. When preparing strong acidic electrolyzed water, take care to follow the recommended procedure for measuring the concentration of available chlorine. Use a reagent at this time.

1. Make sure that the unit is working properly.
2. Clean the unit beforehand under running water to remove any dirt, then clean with strong Kangen electrolyzed water for best results.
3. Keeps the strong acidic electrolyzed water running to clean and disinfect.
4. Shake the water droplets off and allow to dry.
5. Store in a sanitary place.

To clean using the cleaning cartridge

Frequency of cleaning

- Once every three to six months
- When you notice white particles floating on the surface of the Kangen water™.
- When the pH is not as it should.

Refer to the instruction manual for details on the washing procedure.

